



the **outdoor**  
**greatroom**  
company

# The Cove Fire Pit

Installation Instructions for Round Cove Fire Pits



# IMPORTANT

Please consult your Crystal Fire instruction manual for detailed instructions and important information related to the burner installation including: lighting and operating instructions, safety information, and proper tightening of connections with two wrenches.

**DO NOT ATTEMPT TO INSTALL CRYSTAL FIRE BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE OWNER'S MANUAL.**

## Contents

|  |    |
|--|----|
| Required Tools.....                      | 2  |
| Included with your Fire Pit.....         | 3  |
| Assembly Instructions .....              | 4  |
| CF-SPARKER Installation.....             | 5  |
| Gas Connections .....                    | 5  |
| Thermocouple Installation.....           | 6  |
| Electrode Installation.....              | 6  |
| Glass Media and Cover Installation.....  | 7  |
| CV-30-E Installation.....                | 8  |
| Operating Instructions and Warnings..... | 9  |
| Frequently Asked Questions .....         | 11 |



## Required Tools



- **Two people are required for this installation.**



- **2 Open Ended Wrenches**

To secure gas connections.



- **Leather Gloves**

To protect hands from rough edges found on fire pit during installation.



- **One AAA Battery (not included)**

Required for electric spark igniter installation.




- **Utility Knife**

To cut and remove packaging.

- **Power Drill**

To remove support board from crate.


Included With Your Fire Pit

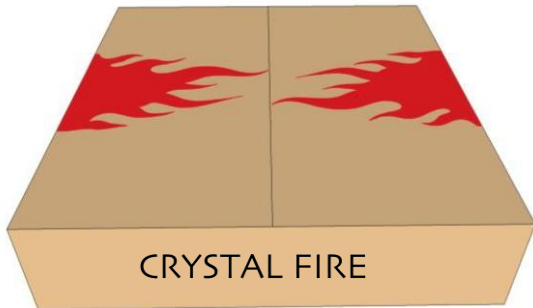

Crystal Fire® Plus (CFP) Burner Kit and Grey Glass Burner Cover for the CV-20 and CV-30 (CV-30E does not have a burner cover)



# Assembly Instructions

1. First, unscrew the shipping block with a power drill. Discard board. It will not be needed for further assembly of this product.
2. Remove fire pit base from the crate you received it in. Place the base in your desired location. Two people are recommended for this step of the installation.

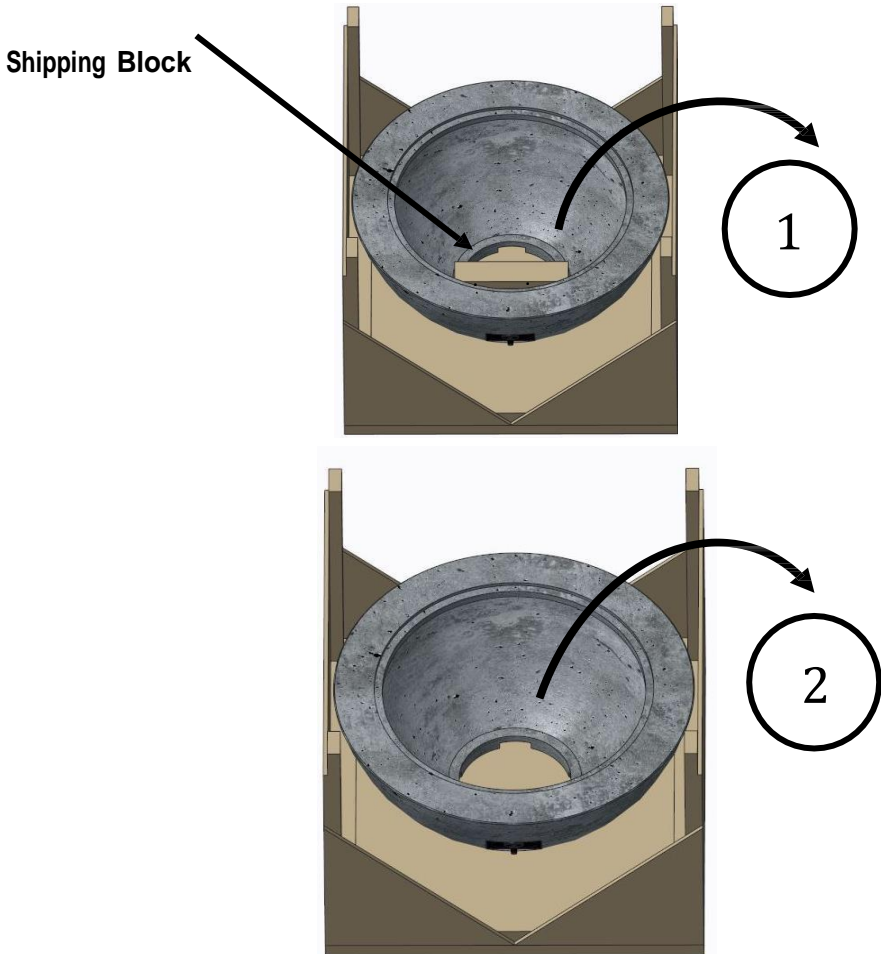

# CF-SPARKER Installation

- Locate CF-SPARKER inside of crystal fire burner box.
- Remove CF-SPARKER cap and hex nut. Insert AAA battery (not included) with + end out.
- Install CF-SPARKER into control panel as shown below.
- Depress CF-SPARKER button to test your sparker.

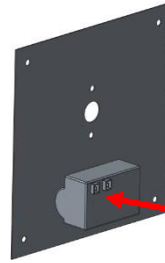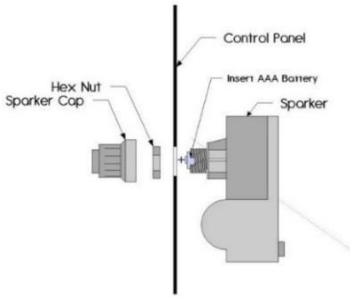


Locate and orient sparker box on control panel as shown. Sparker box must be installed **before** burner valve.

## Gas Connections

**Read and understand your Crystal Fire® Plus Burner Owner's manual before beginning burner hookups or using the device.**


**Do not use Teflon tape or pipe dope on flare fittings.**

- **See Crystal Fire® Plus instructions for burner installation.**
  - All gas connections were completed at the factory.
- Check all connections for leaks. If needed, tighten connection with 2 wrenches and re-check for leaks.
- Attach burner valve to control panel with provided screws as shown below. Ensure sparker box is installed before this step.

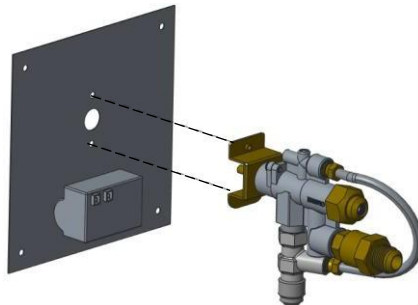



# Thermocouple Installation

- Refer to Crystal Fire® Plus instruction manual for detailed attachment of thermocouple.
- Attach thermocouple to burner valve as shown below.

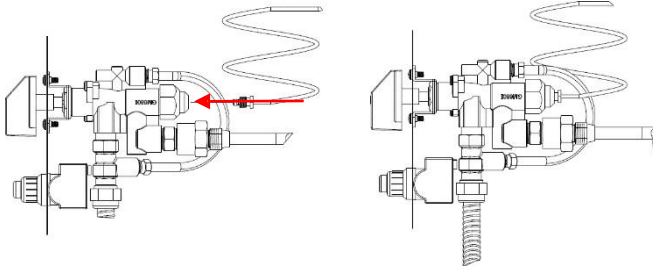

# Electrode Installation

- Connect igniter and ground wire to sparker box. Both wires can connect to either connection point. The unit will operate in either configuration.
- Test system by pushing the button on the igniter. Consult the troubleshooting section of the Crystal Fire® Plus Burner Owner's Manual, if the spark is weak, intermittent, or not present.

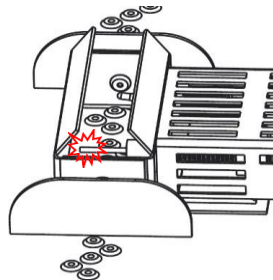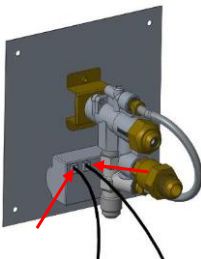

# Glass Media and Glass Burner Cover Installation

1. Scatter all the included glass beads evenly onto the burner surface.




2. Install Glass Burner Cover on the burner.

**WARNING: DO NOT OPERATE CRYSTAL FIRE® PLUS BURNER WITHOUT INCLUDED GLASS BEADS OR OTHER APPROVED FIRE MEDIA.**

**WARNING: DO NOT OPERATE CRYSTAL FIRE® PLUS BURNER WITH BURNER COVER IN PLACE.**

# CV-30-E Installation

- Place burner plate into Cove base.
- Remove the 4 ¼-20 stainless steel screws installed in rivnuts.
- Make gas connections.
- Ignition wind guard should be oriented towards cutout in burner plate. *As shown in detailed view.*
- Replace the 4 ¼-20 stainless steel screws back through the burner and tighten into rivnuts.

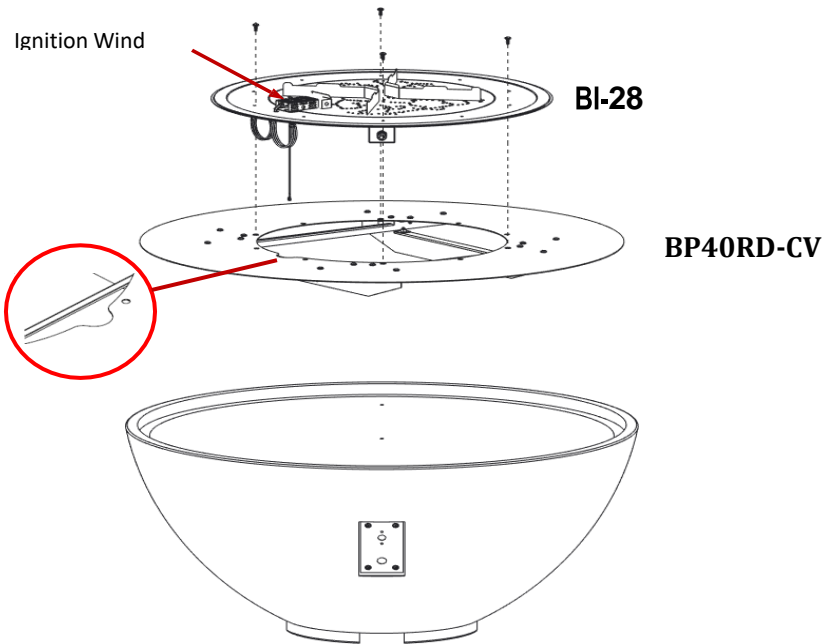



## IMPORTANT

Please consult your Crystal Fire® Plus instruction manual for detailed instructions and important information related to the burner installation including: lighting and operating instructions, safety information, and proper tightening of connections with two wrenches.

**DO NOT ATTEMPT TO INSTALL CRYSTAL FIRE® PLUS BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE® PLUS BURNER OWNER'S MANUAL.**

## WARNING

**After consulting the manual and following instructions, remember; before operating, all gas connections must be fully checked for leaks**



WARNING: This product can expose you to chemicals including Carbon Monoxide and Benzene which are known to the State of California to cause cancer or birth defects or reproductive harm. For more information, visit [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# Operating Instructions

- Verify control valve is in OFF position. If operating on a self-contained propane cylinder, ensure cylinder valve is CLOSED. If operating on a hard-piped system, ensure the main gas supply shut-off valve and all other valves in gas system are OPEN.
- If operating on a self-contained propane cylinder, slowly open cylinder valve.
- Remove glass burner cover before attempting to ignite the burner.

- Press and hold the sparkler button. Verify an audible and visible spark is present within the ignition wind guard.
- Gently press and turn the control knob to LOW/IGNITION position. Fully depress control knob and hold for 3-5 seconds. Burner should ignite and continue to operate when control knob is released.
- If the burner does not light or remain lit after 20 seconds of attempting ignition, turn control valve to OFF position and wait 5 minutes to allow gas to dissipate before attempting ignition again. **DO NOT ATTEMPT TO LIGHT BURNER IF YOU SMELL GAS.**
- With burner lit and operating, the flame height can be adjusted between LOW and HIGH at any time.

# Frequently Asked Questions

## What is Supercast?

Supercast is a proprietary blend of fiber glass and polymer fortified concrete. This guide will help inform you about some unique characteristics of a Glass-Fiber reinforced concrete and help you keep it looking like new for years to come.

## Supercast Glass Fiber Reinforced Concrete (GFRC) Products Warranty Information

- One year warranty on structure and finish. Cracks that exceed 1/8" displacement in either height or gap and determined to be a product of either material or workmanship, shall be warrantied for a period of 1 year. Non-structural hairline cracks are possible and shall not be considered a manufacturing defect.
- Natural variations in color, shade, porosity, pitting and texture may occur with GFRC products and are considered inherent and valued qualities of the material. Variation in shape and dimension can be up to  $\pm 1/4"$ .
- Under most conditions, re-staining/resealing is suggested every 2 years using the stain sealer identified on the next page. The frequency is dependent on ambient conditions including, but not limited to: frequency of use, exposure to UV, saltwater, chlorine, hard water, air temperature, and humidity.
- If covering a GFRC item, use a one-way breathable cover as supplied by The Outdoor GreatRoom Company, LLC (OGC) or equivalent. Do not use other materials or objects in order to hold down or secure a protective cover on top or around the GFRC item.
- Using a one-way breathable cover will help keep the finish of the GFRC looking newer longer, but it is still recommended to stain/seal on as outlined above.
- When used in conjunction with a Crystal Fire Plus burner setup, all custom GFRC products are required to operate with an OGC glass guard installed around the burner. The glass guard improves the flame appearance and reduces the risk of unnecessary thermal stress on the GFRC surface. A glass guard is recommended for stock GFRC products.

## What makes a concrete fire pit unique?

Your fire pit is handcrafted from Portland cement concrete and reinforced with glass fibers to provide exceptional strength and durability compared to traditional concrete. Supercast is typically 1/3 of the thickness of traditional concrete with 3 times the strength. Each piece offers its own uniqueness; you may notice color variations in your fire pit. This is intentionally done during the molding process in order to create a unique natural appearance which mimics natural stone.

## Maintenance Instructions:

To keep your fire pit looking new, we recommend the following:

- Keep covered when not in use to protect from buildup of water, snow, dust, dirt, and debris and direct sunlight whenever possible.
- Do not put the cover on when the fire pit is wet.
- If any colored liquids such as wine or soda are spilled on your top, clean off immediately to avoid possible staining.
- We recommend cleaning your fire pit regularly with a mild mixture of dish detergent and warm water; rinse thoroughly.

## How do I reseal Supercast surfaces?

- First clean using a diluted solution of vinegar and water to remove any dirt or debris that may have accumulated on the surface and allow to dry.
- Reseal the surfaces using the stain/sealers below based on the color fire pit you have. Apply the stain/sealer using a foam roller and allow it to cure for 24 hours before exposing to water or use. The stain/sealers can be purchased at any Sherwin-Williams store.
- Minor surface scratches can be removed by using the stain/sealing method above. Clean the area affected and apply the stain/sealer.
- Natural Grey - MN Concrete Custom Grey: H&C Exterior Color Top solvent-based solid color sealer, Tint Base-Deep, satin sheen. The color mix is for 5 gallons, vendor can adjust color amounts based on size being purchased:

| BAC Colorant | OZ | 32 | 64 | 128 |
|--------------|----|----|----|-----|
| W1-White     | 4  | 42 | -  | -   |
| B1-Black     | 4  | 47 | -  | -   |
| R2-Maroon    | -  | 15 | -  | -   |
| Y3-Deep Gold | 2  | 51 | -  | -   |

- White - MCP White: H&C Exterior Color Top solvent based solid color sealer, Tint Base-White, satin sheen. The 1 gallon color mix is:

| BAC Colorant | OZ | 32 | 64 | 128 |
|--------------|----|----|----|-----|
| B1-Black     | -  | 2  | 1  | -   |
| Y3-Deep Gold | -  | 2  | 1  | -   |

- Midnight Mist - MCP Raven: H&C Heavy Shield water based solid color enamel/stain, Tint Base-Ultradeep, semi-gloss. The 1 gallon color mix is:

| BAC Colorant | OZ | 32 | 64 | 128 |
|--------------|----|----|----|-----|
| W1-White     | -  | 31 | 1  | 1   |
| B1-Black     | 6  | 21 | -  | -   |
| R2-Maroon    | -  | 13 | -  | 1   |
| Y3-Deep Gold | -  | 30 | -  | -   |

Thank you for purchasing an  
Outdoor GreatRoom Company  
product!



Warranty: Fire pit tables are covered under a 1- year  
manufacturer's warranty. Please visit  
[https://outdoorrooms.com/pages/product-  
support\\_\\_product-registration](https://outdoorrooms.com/pages/product-support__product-registration)  
to register your product.



9583 217<sup>th</sup> St. W. • Lakeville, MN 55044  
Toll Free: 1-866-303-4028 • [Sales@OutdoorRooms.com](mailto:Sales@OutdoorRooms.com)